

FETTO Nord 70 Plus—Great Ol' Distortion + Boost

Owner's Manual

Thank you for choosing **FETTO Nord 70+**. Please read this document to get the best use and joy of this versatile Great Old Distortion and Boost effect.

External controls:

Gain:
2 way Gain switch.
Left= high gain
Right=low gain

Treble:
Treble/Tone control.
Start around 11 o'clock.
Clockwise gives more treble.

Pres:
3 way Presence switch. Start in the middle position (minimum presence/treble)

Volume:
Output level. Start at 10-12 o'clock. Clockwise gives more.

More:
Boost level (+20 dB max). Start at 10-12 o'clock. Clockwise gives more.

5-18V DC
External DC adapter. Standard 2,1 mm barrel jack, 5-18 volt regulated DC with center-pin negative (BOSS standard).
The Himmelstrutz pedals are designed to be used with straight power cable plugs. Right angle plugs may not make a secure connection and are not recommended—but may still work!

OUT:
Connect your amplifier (or your next pedal Input) here.

IN:
Connect your instrument (or your previous pedal Output) here.

DRIVE:
Distortion ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a magical, blue LED.

BOOST:
Boost ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a bright orange LED.

*** The push switches in FETTO Nord 70+ is not as stiff as the ones you're probably used to. Now you can play barefoot without that old pain.**

NB: BOOST can be activated regardless of the DRIVE switch.

FETTO Nord 70+ tips & tricks:

It could take some time to get a grip about all possibilities in this pedal. We encourage you to try several different combinations of the outboard control settings as each will impart its own unique character on your tone. Also, try to adjust the volume control of your guitar and you will see how flexible, responsive and real **FETTO Nord 70+** is. Our wish is that you will have a good **FETTO Nord 70+** experience.

Every pedal is 100% handmade, tested and carefully adjusted by the original designer in Sweden. If you happen to remove the bottom plate and find some internal trimmers and jumpers, remember these parts are *not* meant to be adjusted regularly by the user—because of functional/warranty reasons. More information about **FETTO Nord 70+**, and collaborating products, is available at www.himmelstrutz.com.

- Even though the power consumption is low (3-4 milliampere) the battery needs to be replaced when the LED's gets weak or if the tone changes. To change the battery, unscrew the four screws on the bottom plate, bring out the old 9 volt battery (6LR61) and replace it with a new. Then attach the bottom plate with the four screws. Never use **FETTO Nord 70+** without the bottom plate!
- If you play loud, use ear protection. It's easy to forget but please do your best to protect your ears!
- Unplug the input cord when not using the pedal—to save the battery (and environment).
- Don't forget to have fun, with ear protection if needed.

Good luck.

Joakim Hedeby, Himmelstrutz Elektro Art, Sweden