

FETTO Standard — Great Distortion

Owner's Manual

Thank you for choosing FETTO Standard**. Please read this document to get the best use and joy of this little Great Distortion pedal.

External controls:

Volume:

Output level. Start at 10-12 o'clock. Clockwise gives more.

Tone:

Tone control. Start around 11 o'clock. Counter clockwise gives a treble cut.

Drive:

Drive/distortion control. Start at 10-12 o'clock. Clockwise gives more and more is good.

5-18V DC

External DC adapter. Standard 2,1 mm barrel jack, 5-18 volt regulated DC with centre-pin negative (BOSS standard).

The Himmelstrutz pedals are designed to be used with straight power cable plugs. Right angle plugs may not make a secure connection and are not recommended.



OUT:

Connect your amplifier here.

IN:

Connect your instrument here.

GIMME:

ON/OFF push switch*. True mechanical (not electronic) bypass. ON is indicated with a magical, blue LED.

* The push switch in FETTO Standard is not as stiff as the ones you might be used to. Now you can play barefoot without hurting your toes.

** "FETTO Standard" is not identical with the earlier "FETTO 1***" model(s) which were mostly made in raw metal finish. They sound different.

FETTO Standard tips & tricks:

It could take some time to get a grip about all possibilities in this pedal. We encourage you to try several different combinations of the outboard control settings as each will impart its own unique character on your tone. Also, try to adjust the volume control of your guitar and you will see how flexible, responsive and 'real' FETTO Standard is. Our wish is that you'll like the experience of FETTO Standard!

Every pedal is 100% designed, handmade, tested and carefully adjusted by the original designer in Sweden. If you happen to remove the bottom plate and find some internal controls, remember these parts are **not** meant to be adjusted by the user—because of functional/warranty reasons. More information about FETTO Standard, and collaborating products, is available at www.himmelstrutz.com.

- Even though the power consumption is low (approx. 2 mA) the battery needs to be replaced when the LED gets weak or if the tone changes. To change the battery, unscrew the four screws on the bottom plate, bring out the 9 volt battery (6LR61) and replace it with a new. Then attach the bottom plate with the four screws. Never use FETTO Standard without the bottom plate!
- If you play loud, always use ear protection. It's easy to forget but not a good idea in the long run!
- Unplug the input cord when not using the pedal—if powered by a battery—to save the battery (and environment).
- Don't forget to have fun, with ear protection if needed.

Good luck!

Joakim Hedeby, Himmelstrutz Elektro Art, Sweden